

**ASB » ALUMINUM SPACER BRACKET**

- Use when a blade stop requires the Magnalock to be lowered
- Comes pre-drilled for the mounting bolts and wire
- Provides a blind nut for surface installation of strike
- Available in clear aluminum or black anodized
- MagnaCare® lifetime replacement, no fault warranty

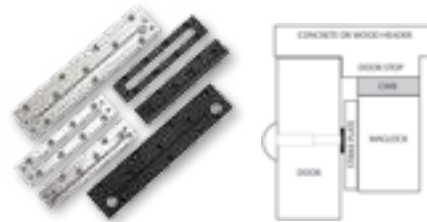
**» MODELS**

PART # | Description

ASB-32BK	Alum Frame Spacer Bracket - M32, Black Anodized
ASB-32CL	Alum Frame Spacer Bracket - M32, Clear Anodized
ASB-62BK	Alum Frame Spacer Bracket - M62, Black Anodized
ASB-62CL	Alum Frame Spacer Bracket - M62, Clear Anodized
ASB-82BK	Alum Frame Spacer Bracket - M82, Black Anodized
ASB-82CL	Alum Frame Spacer Bracket - M82, Clear Anodized
ASCWB-DM62CL	Alum 1-1/2" Spacer - Concrete/Wood Bracket, DM62, Clear

ACCESSORIES

for M32/62/82 Magnalocks®

**CWB » CONCRETE/WOOD BRACKET**

- Used on wood or concrete filled metal frames
- Provides a concealed wire chamber
- Available in clear aluminum or black anodized
- MagnaCare® lifetime replacement, no fault warranty

» MODELS

PART # | Description

CWB-32BK	Concrete/Wood Bracket - M32, Black Anodized
CWB-32CL	Concrete/Wood Bracket - M32, Clear Anodized
CWB-62BK	Concrete/Wood Bracket - M62, Black Anodized
CWB-62CL	Concrete/Wood Bracket - M62, Clear Anodized
CWB-82BK	Concrete/Wood Bracket - M82, Black Anodized
CWB-82CL	Concrete/Wood Bracket - M82, Clear Anodized

**AOS » OFFSET STRIKE PLATE**

- Alters the position of the mounting hole by 1/4" [6mm]. This is often required to clear the glass on aluminum frame store front doors
- Includes Offset Strike Plate only
- MagnaCare® lifetime replacement, no fault warranty

» MODELS

PART # | Description

AOS-62	Strike Plate - M62, Offset
AOS-62D	Strike Plate - M62D, Offset
AOS-82	Strike Plate - M82, Offset

SECURITRON™
ASSA ABLOY